Table of Contents

1.Foreword..... 3
2.Getting to know your touch phone..... 6
3.Starting up the device..... 7
4.Introduce the basic phone function.....9
5.Technical Specifications..... 33
6.SAR 34
7.Service Center List..... 36

The Basics

Overview

Thank you for choosing the GSM / GPRS digital mobile phone. After reading this guide you will be able to fully master the use of your phone and appreciate its functions and ease of use.

Not only does the smartphone and network system provide you with basic calls functions and call records but also with practical many functions and services to improve the time you spend working and playing.

The color screen mobile phone complies with the GSM/GPRS technology and has been approved by certification authorities both at home and abroad.

The availability of some services and features described in this manual depends on the networks and your subscription. Therefore, some menu items may not be available in your phone. The shortcuts to menus and features may also vary from phone to phone.

Our company reserves the right to revise this manual content without prior notice.

1. Foreword

Safety

In order to ensure the phone is used safely and correctly, please read the precautions below carefully before use.

1.1 General precaution

·Your phone is only suitable for the battery and charger approved by our company or else it may cause the battery to leak, overheat, explode or even catch fire.

·Do not knock, vibrate or throw the phone heavily to avoid malfunction, fire, overheating, explosion or fire.

·If there are abnormal phenomena, like temperature rising, color change or distortion during the usage, charging or storage of the battery, please stop using it and replace it with a new battery.

·It may burn the skin if liquid in the battery leaks onto skin or clothes. If this happens please flush with plenty of clean water immediately and go to a hospital at once.

·Please keep the battery away from fire to avoid fire and explosion if the battery leaks or emits a strange smell.

·Do not place expose the battery to moisture or it may cause overheating, fumes and corrosion.

·Do not use or place the battery under direct sunlight, or in hot places, it may cause leakage and overheating, thus reducing performance and shortening the lifespan.

·Do not charge the battery for over 24 hours continuously.

·Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

1.2 Precaution for the use of charger

·Do not cause short circuit to the charger, or it may cause electric shock, fumes and damage to the charger.

·Do not use the charger if the power wire is broken, or it may cause fire and electric shock.

·Please remove accumulated dust on the power plug.

·Do not put water containers next to the power supply to avoid overheating, fire, electric shock and malfunction in case they come into contact.

·Do not disassemble or tamper with the charger or it may cause personal injury, electric shock, fire and the damage of the charger.

·Do not use the charger in places of high humidity, like bathrooms, or it may cause electric shock, fire and damage of charger.

·Do not touch the charger, power cord or power plug with wet hands or it can cause electric shock.
·Do not put heavy objects on the power cord or change the power cord or it may cause electric shock and fire.
·Please unplug the power socket before cleaning and maintenance.
·Please hold the charger to unplug the socket as pulling the power cord may damage the power wire and cause electric shock and fire.

1.3 Cleaning and maintenance

·As the phone, battery and charger are not waterproof, do not use them in places of high humidity and avoid them being wet by rain.
·Please clean the battery and charger with a soft dry cloth.
·Never use alcohol, thinner or solutions, like benzene, to wipe the phone.
·Dirty sockets can cause poor contact and power down, and even make recharging unavailable. So, please clean them periodically.

1.4 Common Precaution

Mobile Phone:

·Please use the phone in an environment with temperature between -20℃- 45℃and humidity of <75%.
·Please use the phone far away from regular telephones, TV sets, radio sets and office automation equipment, to avoid affecting the normal use of these equipments and mobile phone.

Battery:

·Store the battery in cool and ventilated place without direct sunlight.
·The battery has a limited lifespan. The usage of battery will be shortened progressively due to frequent charging. Once the battery is out of use, it means that its lifespan has ended, and you will need to replace it with an approved new battery.
·Do not dispose of old batteries as household waste. Give them to specified disposal places and follow any stipulated instructions for disposal.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCYIONS.

Charger:

·Do not charge under following conditions:
-- Places with direct sunlight
-- Places with ambient temperature less than 0℃ or over 40℃,

wet or dusty places with strong vibrations (it may cause malfunction)
-- places near electrical appliances (it may affect the image and sound) like TV set, radio, etc
-- Adapter shall be installed near the equipment and shall be easily accessible. The plug considered as disconnect device of adapter

Phone Registration

In order to register the details of the customer, the software embedded in the phone has the facility to send an sms automatically to MIRC Electronics Ltd upon insertion of the SIM card. It is in the interest of the user to register its details with the company for any future services, as may be needed. The user agrees to pay the SMS charges in respect of the automated SMS sent to the company upon insertion of the SIM card

2. Getting to know your touch phone

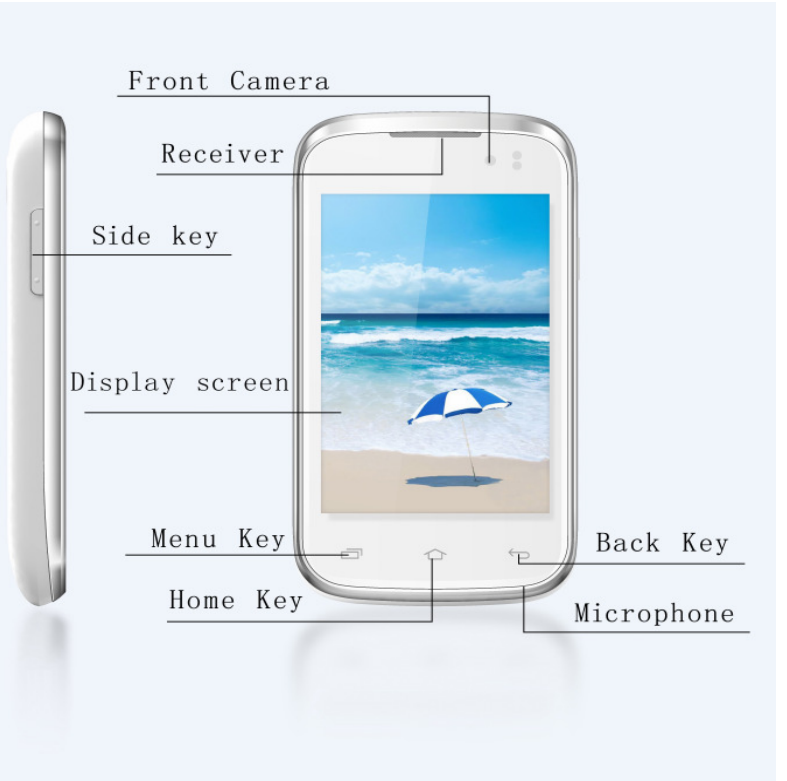

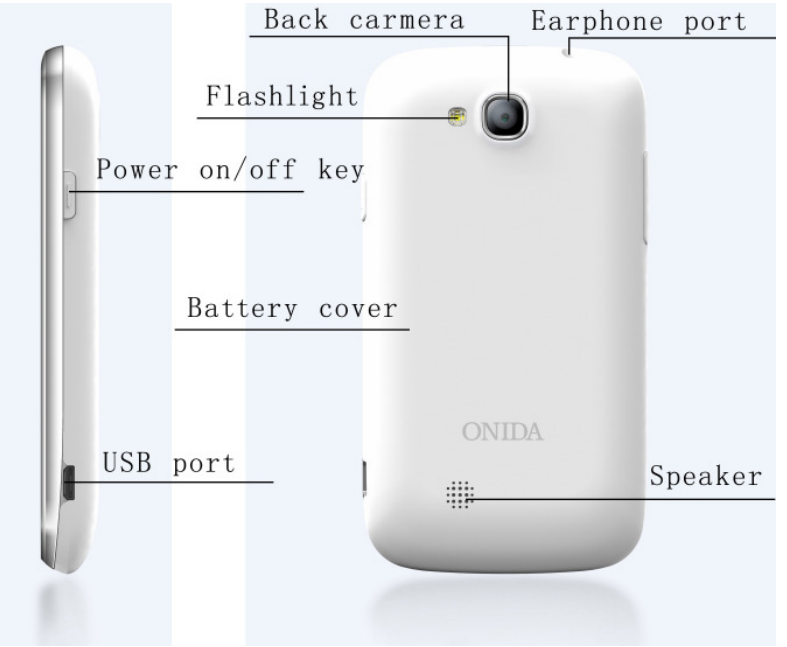

3. Starting up the device

To remove the back cover

·Make sure your device is turned off.

·Firmly hold the device with the front panel facing down.

·Slide your finger into the groove at the top of the phone and gently pull open the back cover.

To install the SIM card

·Remove the battery if it is installed.

·Locate the SIM card slot, and then insert the SIM card with its gold contacts facing down and its cut-off corner facing out of the card slot as shown in the diagram.

·Slide the SIM card completely into the slot.(See picture 1)

Note: The phone can support two SIM cards. The card will support 2G card.

To install a memory card

To have additional storage for your images, videos, music and files, you can purchase a memory card and install it in your device.

Locate the memory card slot on the upper part of the exposed right panel.

Insert the memory card into the slot with its gold contacts facing down until it clicks into place.(See picture

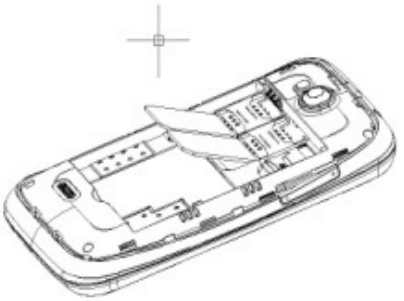

P1

P2

To install the battery

1. Align the battery's exposed copper contacts with the battery connectors at the bottom part of the battery compartment.

2. Insert the contacts side of the battery first and then gently push the battery into place. Replace the back cover.

Charging the Battery

New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Note: Only the AC adapter and USB sync cable provided with your device must be used to charge the device.

Connect the USB connector of the AC adapter to the sync connector on your device, and then plug in the AC adapter to an electrical outlet to start charging the battery.

As the battery is being charged while the device is on, a charging icon appears in the title bar of the Home screen. After the battery has been fully charged, a full battery icon appears in the title bar of the Home screen.

Warning:

• Do not remove the battery from the device while you are charging it using the AC or car adapter.

• As a safety precaution, the battery stops charging before it overheats.

Power on/off

To power off your phone, press & hold POWER. On release, the Phone options menu opens. Select ‘Power off’ and confirm.

To power on again, press & hold power

4. Introduce the basic phone function

1. Switch Main Menu style

(1) In default Home screen, slide your fingertip left and right along the screen to reveal the more home screen.

(2) On Home screen, click icon on the bottom of the screen (Main menu icon) to enter the main menu screen, slide your fingertip left and right along the screen to reveal the more applications.

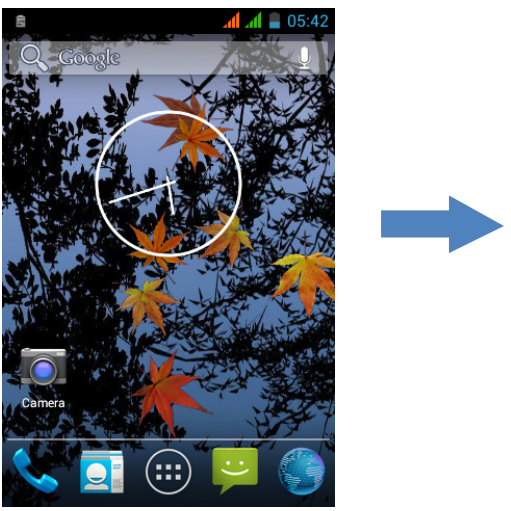

2. Home screen

(1) Read your notifications

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window.

Ongoing notifications report activities such as call forwarding ON, current call status, song playing.
Notifications report the arrival of new messages, calendar events, and alarms. You can clear notifications list by selecting ‘Clear’ notifications at the top of the notifications window.
To open the message, reminder or other notification, you can touch the items. To close the notifications window, slide your finger up the screen.
(2) Create Home screen shortcuts and widgets:
From the Home screen, touch the main menu, and then click the WIDGETS. Touch & hold to pick up a widget to select a shortcut to some of your saved information (such as a play list), a widget (a clock) for your Home screen.

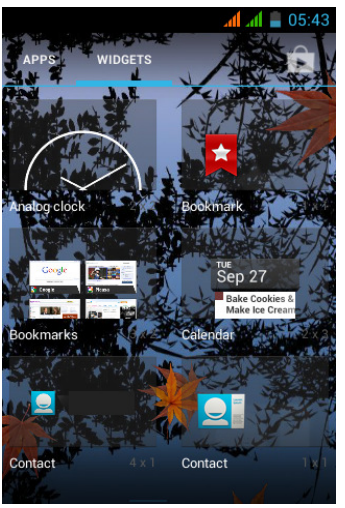

(3) Move objects on the Home screen
• To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it’s ready to be moved.
• Without lifting your finger (or you’ll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

3. Camera

All the pictures you can capture or view on your phone are stored on a memory card, which must be installed in your phone. Before you can use the Camera or view pictures in Pictures, make sure you have a card installed.

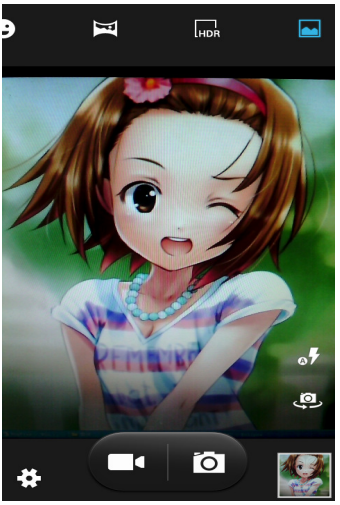

4. GPRS/WLAN network

Your device's networking capabilities allow you to access the Internet or your corporate network through WLAN, GPRS, EDGE (if available)

You can also add and set up a VPN or proxy connection.

To use WLAN on your device, you need access to a wireless access point

Note: The availability and range of your device's WLAN signal depends on the number, infrastructure, and other objects through which the signal passes.

To open the Browser you need to be connected to a network.

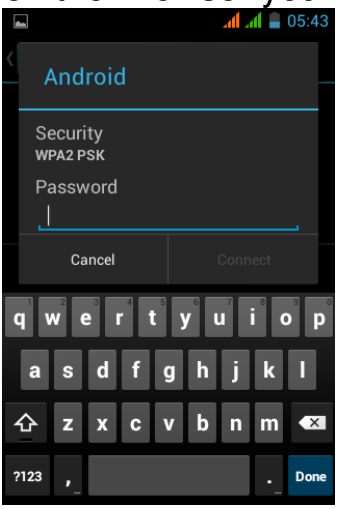

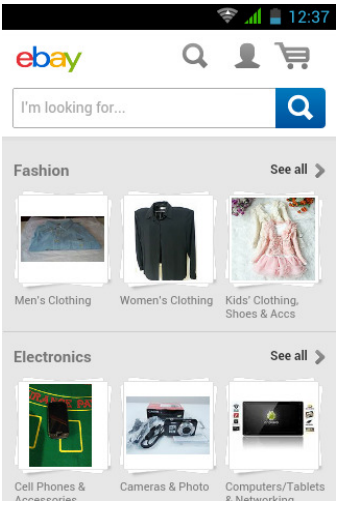

5. U-disk storage

This phone supports movable storage, i.e., the U-disk function.

When the phone is switched on, you see the icon in the status bar on the top of the screen when its connected to a PC by a data line. Touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window. Select [USB connected] and touch [Turn on USB storage] to

confirm, you can use the phone as a U-disk.

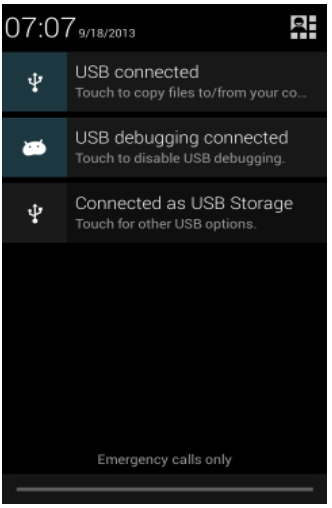

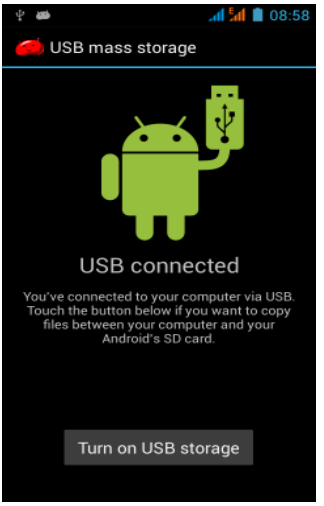
08:58
USB mass storage
USB connected
You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage

6. Music

Your music is organized into four categories: Artists, Albums, Songs, and Play lists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play.

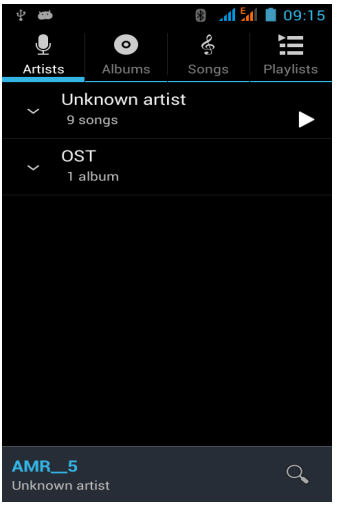

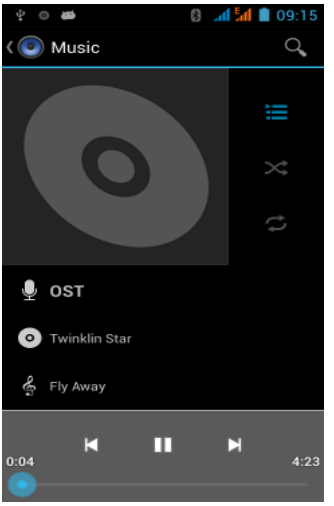

7. Bluetooth

The phone supports Bluetooth(BT) functions, you can establish a wireless connection between the phone with other compatible devices, and data transmission, you can establish a wireless connection between devices in the phone with a distance of up to 10 meters. Bluetooth connection may be interference by obstacles, such as walls or other electronic device.

1. Enter the setting menu, Touch the Bluetooth to open the function, idle screen will display BT icon in the status bar.
2. Open the BT discoverable, and other devices can search the

phone.
3. Before using the phone as a Bluetooth device, you need to pair the phone with the target device as follows:
-Sure your phone has Bluetooth-enabled.
-Touch "Scan for devices." Bluetooth devices within the range of the phone will start scanning.
-Touch the device you want to pair, to confirm password to complete the pairing. You can use Bluetooth to share the pictures, videos or music files with family and

8 Call menu

The Call menu is only visible during an active call, and features such as Call Waiting, Call Diverting, and Multiple-party Call are network dependent. Contact your network service provider.

The call options include:

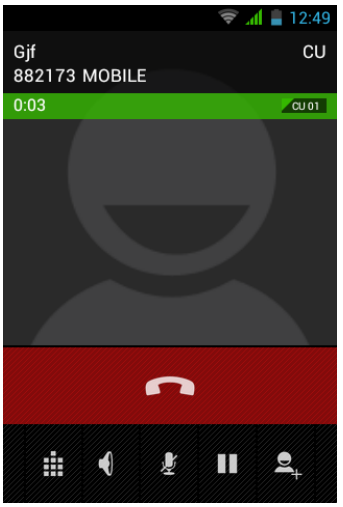

Mute

- Mute

Do not send local voice.

- Hands free

Switch on the loudspeaker to amplify the voice.

- Hold

Put the current call on hold or retrieve the call on hold.

- End a call.

End the current call.

- New call

  Make another new call

- Click Menu key -- start voice recording

Start voice recording.

9 Functional Menus

(Part of the following features depend on specific models)

9.1 File Management

The file management is composed of sdcard , sdcard is the external Memory. In the file management, files can be searched rapid, deleted or edited in each card and new files can be created.

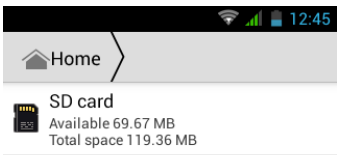



9.2 Sending an Email

You can send an Email to anyone who has an Email address.

Entering the procedure and set an account, you can click the account so that you come into the account already created, you can also activate, compile and create an account and then delete the operating. The email can be sent and received just like in a computer. This procedure requires the network support.

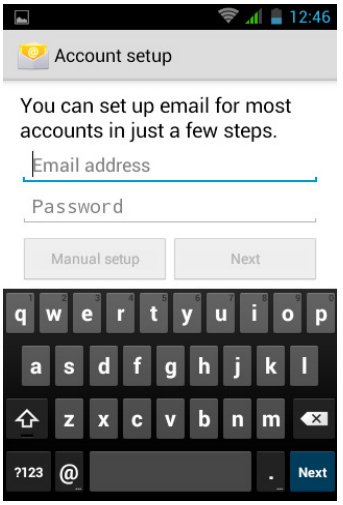

9.3 Dialing

When dialing, you can have a quick access to the call records, contacts and digit dial keyboard (used for manual dialing) by the menu key on the screen.

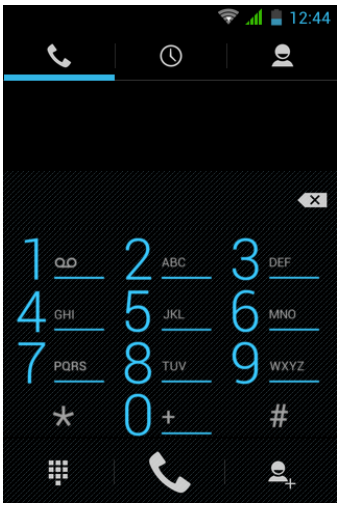

9.4 Call

Click a number portrait in the phonebook, and you can do these things instantly: dial, send a message and make a call. During call, you can select applications such as adjusting it to mute mode, switching to robot portrait, turning off the voice and intercepting photos to SD card.

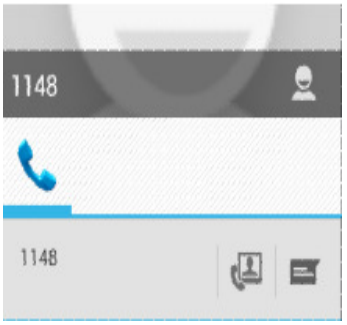

9.5 Calculator

Your phone provides a calculator with 4 basic functions for the convenience of your calculating.

Press this button , and you delete the input and output in bitwise.

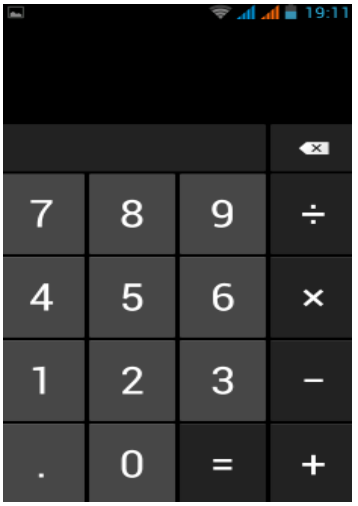

9.6 Browser

The browser allows you to surf on the net and browse the page just like on the computer. You can create on the phone a bookmark and synchronize it with computer. You can have a quick access to your favorite sites on the main screen.

You could view web pages in longitudinal or transverse mode. The page rotates according to the rotation of the phone and automatically adjusts to fit the page.

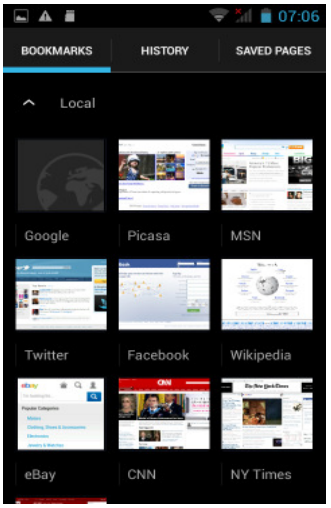

9.7 Voice Recorder

The recorder could be used to record audio files.

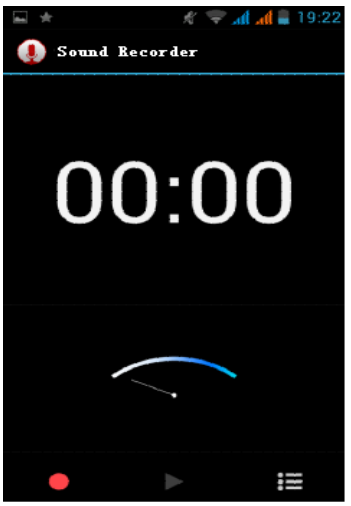

To start voice recording: Tap

To end voice recording: Tap

To play back voice recording: Tap

The audio files are automatically stored on your phone. Click the Menu key, and you can operate and set the recorded voice. The file can be in document management and various players can be selected to play the voices.

9.8 Calendar

Calendar allows you to view your schedules and events at

any time. You may view schedules one by one or several ones at the same time.

Select to show calendar by day, week or month. If “by week (or month)”, the calendar will be shown by week (or month). This application is convenient for you to view schedule or add events.

9.9 Settings

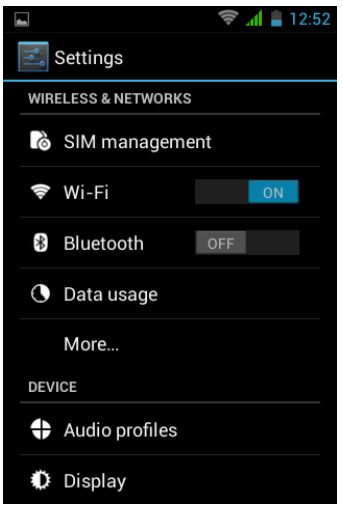

- Card management: SIM card can be managed and made settings.
- Wi-Fi: Wi-Fi can be turned on and off and made some settings.
- Bluetooth: Bluetooth can be turned on and off and settings are made.

- The information flow usage: It makes you in full awareness of the usage of the information.
- More: Click more and you will set up flight mode and VPN and more.
- Audio profiles: General, silent, meeting and outdoor optional. In the meanwhile, customized setting-up of some scene modes are allowed.
- Select a mode and enter the customized setting-up, operational are vibration, volume, ring tones, notifications and key beep, etc.
- Display: Customized setting-up of the phone luminance, wallpaper, the screen and screen time-out and font size is allowed.
- Storage: The internal memory of the storage card and of the phone is shown.
- Battery: The usage detail of the battery is shown.
- Applications: View, manage and delete the applications on your phone.
- Account and synchronization: Set the synchronization of your phone account with your phone.
- Location service: Set the service during the locating.
- Safety: Set unlocking pattern; lock the SD card; set the SD card.
- Language and keypad: Select a language and input method.
- Backup and reset: Reset DRM and restore factory settings to clear all personal data on your phone.
- Date and time: Set current time and date.
- Schedule power on/off: set the time to turn on or off your

phone.

- Auxiliary function: Some auxiliary functions can be set.
- Developers' options: Set some options used by developers.
- About phone: View the model, service status, mobile software and hardware information, etc.

9.9 Clock

■ Clock

Enter the menu to display the current time.

■ Alarms

Your phone provides many groups of alarm clocks.

Select one of them to edit and customize alarm clock.

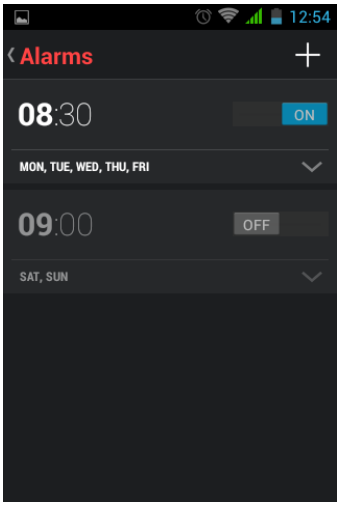

9.10 Radio

Wear your earpieces of radio before searching for channels.

Channel list: Display the list of FM radio channels. You can select to play one of them. (the list can contain 20 channels maximum)

Search: Select this option to automatically search for channels and generate the list of channels.

Loudspeaker: Press the button to use the radio loudspeaker.

and : Tap to move to another channel.

9.11 Search

You can locally search for the information you need.

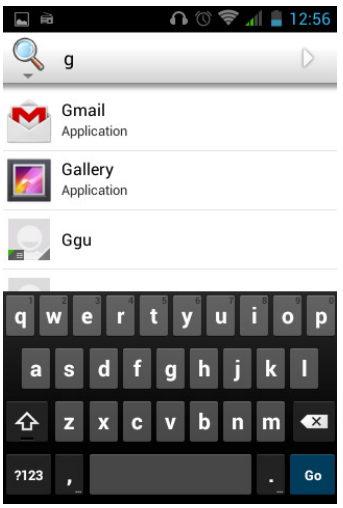

9.12 Contacts

The “contacts ” lets you easily call your colleagues or friends, or send emails or short messages to them. You may add contacts directly from your phone, or synchronize “contacts” with any application on your computer. You may open “contacts” directly from the Main screen, or open it via the “Dialing” application.

Add a contact:

To add a contact, directly enter the name and phone number, or import the name and phone number from the SIM card. (The number of contacts you can add is limited by the memory of your phone.)

Search for contacts:

To search for a contact, press the Search key in search screen, and a search box will pop up. In the search box, enter the key words, such as first name, second name and company name. While you are entering the key word, the matching contacts immediately appear.

Edit a contact:

To edit details of a contact, select “Edit a contact”.

Delete a contact:

To delete the current contact, select “Delete a contact”.

From the menu, you can also synchronize with or share an account or import or export a contact.

9.13 Gallery

Gallery is a picture manager that typically exhibits miniatures, supports the features of “save picture”, “set pictures as desktop” and “share picture”.

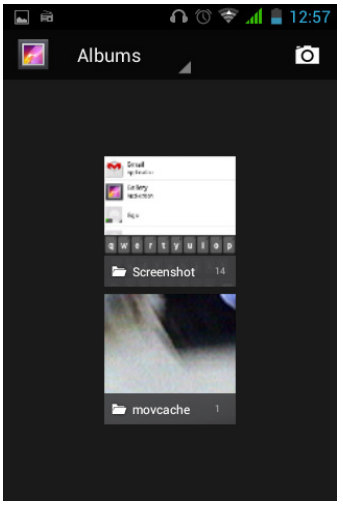

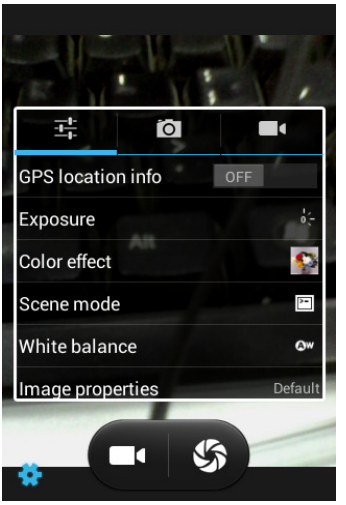

9.14 Messaging

Messaging lets you send text and multimedia messages to any contact that has an SMS device. The multimedia messages include photos, video clips (for iPhone 3GS or other new style phones), contacts information, and voice memos. What's more, you can send messages to several contacts at the same time.

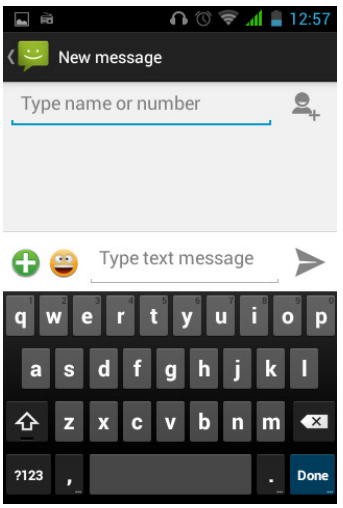

Note: Perhaps Messaging is not available in all countries and regions. Probably you need pay for using Messaging. For more information, consult your network operator.

As long as you are within the network, you can use "Messaging". As long as you can make a call, you can send messages. You probably have to pay for sending or receiving messages, depending on your network operator.

Send a message: Tap it, enter the number and name of the contact or select the contact from Contacts. Tap the text box above keypad, enter the information and then tap “Send”.
After selecting the number, you can select such options as Call, Add subject, Attach, Insert facial expression, and more.
Tap Settings to set ringtone, Delivery reports, and maximum quantity of messages.

9.15 Notification Menu

Slide and pull down menu on the main interface, you can see the message notice and choose whether to turn on or off WIFI, Bluetooth, off-line mode. In the data connection, the current SIM is available to make data connection of GPRS. Slide it around you can see the options of profile for your convenience.

9.16 Download Content

You can download through the browser things and pictures you want and list them in the Download Content menu.

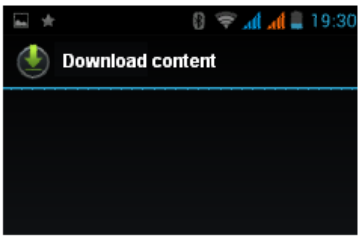

9.17 Music

Music is used for enjoying the stored audio files. Select Music, you can see the menus of “List of played songs”, “Songs”, “Specialists” and “Artists”.

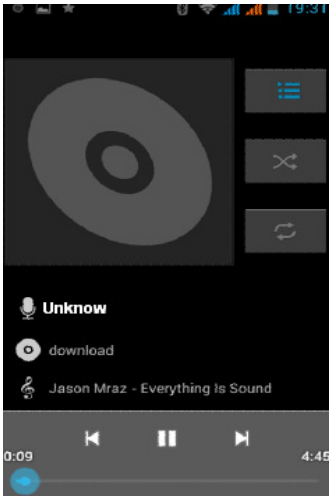

To pause playing a song	Tap ⏸
To resume playing a song	Tap ▶
To skip to the next song or reading material	Tap
Return to the previous song or reading material	Tap
To move fast backward or forward ,The longer you hold,	Touch and hold or .the more songs you skipped.
To skip to any point in a song	Drag the progress bar.

9.18 Call Records

Come into the call records, you can view missed calls, received calls and outgoing calls. The calling time is viewed in each record and features such as calling, sending messages and adding to new contacts can be set. Deleting call records and

setting up speed dial can be done in the menu.

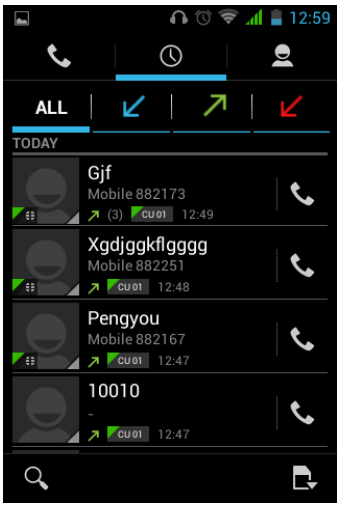

9.19 Widget

The widget is on the right of applications in Main Menu, holding down this widget, you can drag it anywhere you want in the main screen. It is convenient for you to enter that procedure.

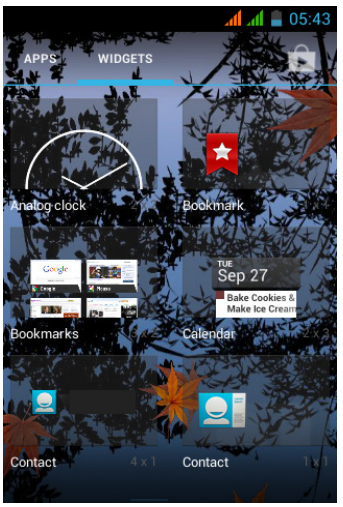

9.20 Selecting Wallpaper Source

Hold down the main screen, the options of selecting wallpaper source will appear, then you can set up wallpapers you like.

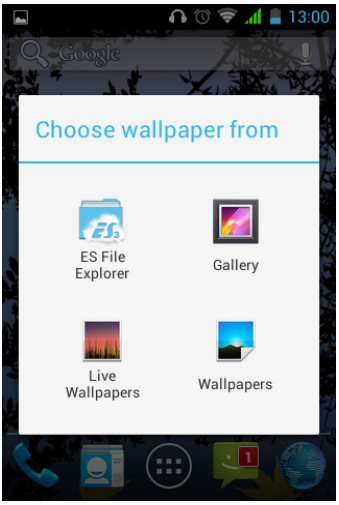

10 Text Input

Enter text via the keypad. Examples of text include contact details, emails, short messages, and websites. The keypad provides the functions of spelling prediction, spelling correction and learning while using.

The smart keypad may give you prompts of correct spelling, depending on which application you are using.

Enter text：

1 Tap the text box (memo, or new contact) to call the keypad.

2 Tap the keys on keypad.

At the initial stage, you can tap keys using either of your index fingers. Once you get familiar with the keypad, you can try tapping keys using both of your thumbs.

While tapping a key, the corresponding letter will appear

above your thumb or another finger. If you are tapping a wrong key, you may slide to the correct one. Only when your tapping finger leaves a key, can the corresponding letter be entered in the text box.

To delete a character	Tap 。
To enter an upper-case letter	Tap , and then tap that letter.
To enter a digit	Tap ?123, and then tap that digit.
To enter a symbol	Tap ?123, and then tap that symbol.
Quickly enter a space	Press the space key twice successively.
To toggle input methods	Hold down to , to bring up the keyboard.

11 SD Card Introductions

Your mobile phone supports SD card to expand the memory.

Install the SD card according to the indication.

As one of storages for your phone, SD card has been set as the default storage at factory. You can directly use it without making any settings.

Use as flash disk: If “Phone——Data Wire——PC” is well connected, the PC will prompt “New hardware is found”, and “MT65xx Android Phone requires to be installed” will appear in the dialog box, see the figure below:

Welcome to use to find new hardware wizard
This wizard helps you install software
MT65xx Android Phone
If your hardware installed with a CD or floppy disk, please will now its insertion.
You expect guide do?
Automatic installation software (recommended) (I)
From the list or the designated position installation (advanced) (S)
To continue, please click "next".
Next
Cancel

Check the relevant menus in the phone are opened or closed, selecting one by one as follows:

Main Menu - Settings - Application - Development - USB debugging. Uncheck “USB debugging”.

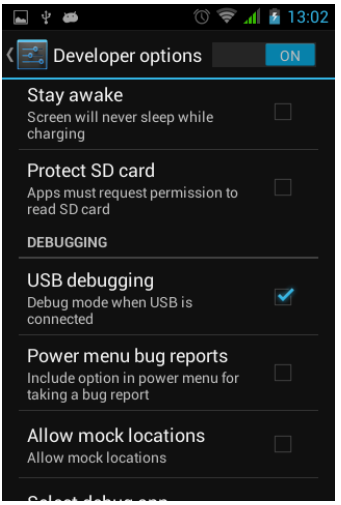

After checking and confirmation, reconnect “Phone - Data Wire - PC”, and pull down notification menu in the standby interface:

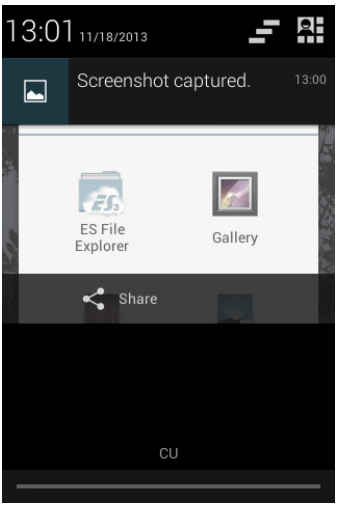

Select “used as USB storage device”, and the following screen pops up.

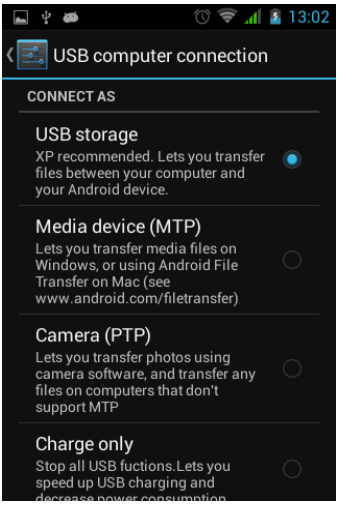
13:02
USB computer connection
CONNECT AS
USB storage
XP recommended. Lets you transfer files between your computer and your Android device.
Media device (MTP)
Lets you transfer media files on Windows, or using Android File Transfer on Mac (see www.android.com/filetransfer)
Camera (PTP)
Lets you transfer photos using camera software, and transfer any files on computers that don't support MTP
Charge only
Stop all USB fuctions.Lets you speed up USB charging and

Select “USB storage device” and such dialogue box pops up:

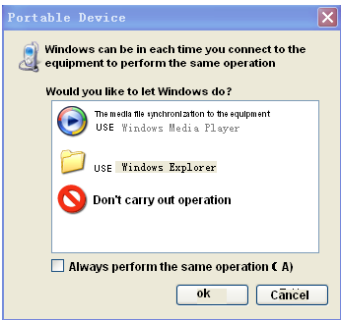
Portable Device
Windows can be in each time you connect to the equipment to perform the same operation
Would you like to let Windows do?
The media file synchronization to the equipment
USE Windows Media Player
USE Windows Explorer
Don't carry out operation
Always perform the same operation (A)
ok
Cancel

You can synchronize files on the computer with those on the phone according to your needs or you can manage files on the storage card.

Select “MTP storage” to support the phone to function as a U-disk. If your computer is not supported by WIN7, you need to install MTP drive (you can directly update window player to the latest wmp11 which comes with MTP drive).

Follow the prompts appearing in the phone to operate, so that data uploading and downloading with U disk can be achieved.

Select “Camera PTP”, you can export photos on the phone to the computer.

Note: Your mobile phone supports the plug-in feature. Without turning off your phone, however, it does not support inserting or remove T card. Generally, it is not recommended to remove and install the SD card.

5. Technical Specifications

Technical Specifications
Weight: 115g (Including battery)
Dimensions: 115.5*62*12.5mm
Band:
GSM900MHz/DCS1800MHz/GSM850MHz/PCS1900MHz
Battery Type: Li-ion
Battery Voltage：3.7V
Battery Capacity: 1300mAH
Battery Time (No prior or separate notice is required for capacity changes)

Note: Actual operating conditions depend on the local network environment, SIM, and user behavior.
Warning: Any consequence caused by misuse, abuse, or not following any and all of the above-written suggestions and instructions shall not hold the producer in any way responsible to any degree.
Announcement: The manufacturer reserves the right to change or upgrade specifications or software versions without prior or separate notice. Trade marks mentioned or used in this material belong to their respective owners.

Accessory List

1 Each of handset, battery, charger, headset, user manual, data cable.

6. Specific Absorption Rate(SAR) certification information

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines and the guidelines issued by Department of Telecommunication (DoT). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit for mobile devices is 1.6 W/kg. Tests for SAR are conducted using standard operating position with the device transmitting at its highest certified power level in all tested frequency bands.

It is declared that the SAR value of this Mobile Handset is certified by ILAC and is in conformity with the SAR values of 1.6 W/kg as recommended in the guidelines issued by DOT

The highest SAR values under the ICNIRP guidelines for this device model are:
Maximum SAR for this model and conditions under which it was recorded

---

Head SAR: 0.870 W/Kg
Body SAR: 1.544 W/Kg

During use, the actual values for this device are usually well below the values stated above. This is because, for purpose of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power output of the device, the lower SAR value.
If people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the body during use, or reduce the amount of time spent using the device.

7. Service Center List

Maharashtra: Mumbai-Andheri 32945199/26878136 / 8137/ 4879/ 26874891/ 9324102119 Mumbai-Chembur 32937984/25241984/ 9323786625 Mumbai-Borivali 9867643695/ 28697754 / 28697802 /9867643695 / 9323724415 Mumbai-Goregaon 9324721942 / 28764605 / 28791499/9892530953 Mumbai-Lalbaug 9869230643/ 24714300 / 64517177 / 9869230643 Thane 25470806 / 9322192400 / 25421948 / 9323724463 Kalyan 3209470/ 2327060/ 9324451953 Vasai 2334089 / 90/9323698399 Vashi 27827503/27827583 / 9821716724 Vasai 6451455/ 9967905543 Kalyan 3212075/ 9323294772 Nagpur 3248461/65 / 9373599205 Nagpur – South 2222366 / 6460366/ 9372425958 Amravati 3297767/ 9326280099 Chandrapur 277166 / 9372277166 Akola 6418348 / 9326450488 Pune 32931959/ 2605 4770/ 40078356 / 9372497877 AhmedNagar 2425877/ 9325606919 Pune NEW Wanawadi 40052177 / 40090377 / 9371205077 Pune-Kothrud 25461876 / 9371205077 Solapur 3294758 /2723711 / 9370454570 Pimpri / Chinchwad 27485173/ 9890968052 Panaji - North Goa 222 2736 / 222 1099 / 222 8295 / 9325551233 Madgaon - South Goa 3259391 / 9326797265 Kolhapur 2462325/ 9371225633 Sangli 3298587 / 2322 242 / 9370820104 Ratnagiri 321683 Satara 284351 /

9370820104 Aurangabad 3252656 / 9372369399 Aurangabad 6992444 / 9922681232 Nasik 3200775/ 6524123 / 578524 9372422890 Jalgaon 3206670 / 3204257/ 232368 / 9370730985 Nanded 325025 / 321253 /9325084880

Karnataka: Bangalore- Indiranagar 32928265/ 9341033739 /Bangalore - Rajaji Nagar 23122672 / 231252459916908103 Bangalore – Jaynagar 26577409 / 26576274 / 9916908046 Bangalore Radial CRC 25438796 / 25438795 9902732891 Mysore CRC 3206473 / 2463437 / 9341255959 Kolar 401445 / 9844405543 Mangalore 3255339 / 2411210 / 9341880107 Mangalore 2414924 / 2415445 Hassan 266606 Udupi 2532810/ 2532830 Shimoga 277391/ 226846 Hubli 3298808 / 2214814 / 2288712 / 9341680104 Gulbarga 324327 / 275816 / 9886628723 Raichur 231311 / 9886628723 Davangere 325765 / 233982 / 253585 / 9449629481 Bellary 277826 / 9449629481 Belgaum 3295249 / 2424095 / 2469139 / 9342306934 Bijapur 2255278 / 9342306934

Tamil Nadu : Chennai 32961651 / 28330220 / 9381144102 Chennai – Adyar 24525067 Chennai - Tambaram 22413334 Chennai – Avadi 26558118 Chennai – Tondairpet 25913350 Chennai – Valasarawakam 24865500 Chennai – Kilkattalai 22475300 Pondicherry 3296177 / 2342467/ 2348856 / 2222368 / 9344444112

Cuddalore 324566 /236677 / 223105 /9345344108 / Vellore 2235946/ 2235964/ 4203946 / 9894600218 Chennai – Radials 32973243 / 32973244 / 9381144118 Kanchipuram 67270964 Tiruvannamalai 250761 / 254167 Madurai 3259062 / 2533 033/ 6543001/ 6543002 / 9360044103 Tirunelveli 3291831/ 2331731/ 2331831/ 2331901/ 9367944111 Nagercoil 234362 / 234372 / 9381251696 Trichy 2775133 / 2770433 / 9345144120 Dindigual 2433747 / 9344678809 Thanjavur 271729 / 271297 9360318839 Madurai 2604340 / 2600529 / 9360044116 Karaikudi 227939/ 40 / 9360009802 Puddukotai 320441 Coimbatore 3258032/ 252 7314 / 3250431/ 243 3340 / 244 3482/ 93448 44117 / 93448 44104 Salem 3048090 /244 9525 / 244 3237 93444 44113 Erode CRC 222 7211 / 222 7201 / 93622 27201 Karur 259 295 / 234 295 / 9367155286 Pollachi 325756/ 231796 Tiruppur 223 4526 / 223 0407 93443 44110

Andhra Pradesh: Hyderabad 32935964 Secunderabad 27840126 / 9885579039 Kukatpally 23161296 / 9885569764 Malakpet 24547649/ 9885578329 Kurnool 278510 / 9393840105 Tirupathi 2286867/ 6563377 /9391724389 Karimangar 2230947 / 9290077307 Nizamabad 550115 / 9347240104 / Godavri Khani 932444204 Ameerpet 32495566 / 62615566 / 9246509614 Nellore

9393667793 Godavari Khani 243123 / 9849262806 Warrangal 2454951 / 9885850002 Mahabub Nagar 253475/ 9849412435 Ananthapur 227801/ 9346235756 Proddatur 248844 / 9849655619 Vijaywada 3299410 / 2438681 / 6536040 / 9397840107 Vizag 3296423 / 2598 463/ 6533825 / 9394240111 Rajahmundry 6663873 / 2443873 / 9393940112 Guntur 3252223 /2233006/ 9396402716 Vizianagaram 9246492177 Eluru 9246492177 Bhimavaram 9246492177 Ongole 9246492177 Tenali 9246492177 Khammam 9246492177 Kakinada 9290624383

Kerala: Cochin 3259353/ 3988900 / 2357 536 / 2357 440 / 9388648410 Calicut 3942114 / 2740 858 / 2743 502 / 9349748417 Vadagara 2522502 / 9947033220 Malapuram 3298228/ 2730125 /9947033228 Kannur 3292681 /2766 581 / 2711733 / 9349748416 Payannur 325456/ 201/742/209/511/ 9446005231 Thalaserry 3205179/ 2322152 / 9446005225 Trivandrum 2465 426 / 2462 924 / 9349348418 Balarampuram 2409010 / 2409238 / 9947030083 Attingal 2629368/ 9947030088 Kottayam 3292651 / 2575 446 / 2575 336 / 9947031631 / 9349948420 Kattappana 273255 / 9947031643 Thodupuzha 220355 / 9947031644 Trichur 3296725 / 3249666/ 2337667 / 9349848419 Kollam 3963666 / 2765 721 / 2743 701/ 9387008421 Pathanamthitta 2231450

/ 9349996332 Alleppy 3255001 / 2267065 / 9388899449 Perumbavur 2520099 / 2590099/ 9388405846 Aluva 6520208/ 2620208/ 9387171000 Palakkad 938883883 Mavelikara 3290222 / 9995154512 Tirur 9847425151 Irinjalakuda 3291515 / 2830796 9387301515

Gujarat: Ahmedabad 32942148 /26422176/ 26422174/ 26440505/ 26422175 / 30028232 / 9925236541 / 9998082070 Gandhinagar 32900501/ 23243747 / 9925236511 Bhavnagar 2522523 / 9925236555 Rajkot 3204919/ 2454783 Gandhidham 323070 / 9327314443 Mehsana 254573 / 9825477439 Jamnagar 9924047076 Baroda 3253267 /2786041/42/43/45 Surat 3018652 /2465633 / 34 /9825979998 Surat 9824172114

Madhya Pradesh: Indore 3249000/ 3241043 / 2530 146 / 679 / 126 / 9302473112 Gwalior 3240900/ 2428513 /9300773115 Ujjain 3240900 / 2525921 / 9301508801 Ratlam 324490 / 230235 / 9329435055 Bhopal 3240900 / 2558192 / 9301373113 Jabalpur 3240900 / 2450621 / 9303373114 Rewa 256491 / 9893974910 Balaghat 247652 / 9425139552 Itarsi 235222 /9981207108 Dewas 220005 /9893064949 Sagar 329951/ 2392086 / 9329414144

Rajasthan: Jaipur 3206300 / 3245484 / 5101951/ 5116601 / 5116602 / 5116603 /9314914110 Ajmer 3291084 / 2632548 / 9352214113

Kota 5100137 / 9314412303 Jodhpur 3253809/ 2440413 / 2622366 / 2633449 / 9314714116 Pali 320900 / 256370 / 9352916107 Udaipur 3297675 / 2411548 / 2417182 / 9314414112 Bikaner 3295324 / 2525425 / 2201958 / 9351658717 Ganganagar 2476195 / 9252524717/ 9784866246 Bhilwara 307054 / 9214966006/ 9829142360 Sikar 253645 / 9214177130 Alwar 5120630 / 9351372508

Punjab & Himachal Pradesh: Ludhiana 9316404203 / 9317617216 / 98888904201 Chandigarh 2714614/ 2703248 Bhatinda 2254265 / 5012075 Patiala 3255432 / 2205603 Jallandhar 3245432 / 2225891 / 2235488 Amritsar 3245432 / 2530349 Hoshiarpur 245508 Pathankot 2254182 Kangra 9816944028 / 9218922881 Shimla 2655136 / 9816046016 Bhota 9817109838

Jammu & Kashmir: Jammu 2562258 / 9906037727 / 9906026170 / 9906020854 Srinagar 2481083 / 9419006964 / 9906303093

Haryana: Karnal3295237 / 3293794 2220525 / 2220725 / 2220825 / 9354717310 / 9355956700 Ambala 3296270 / 4006270 / 93158-59018 Rohtak 250335 / 9315430724 Faridabad 3297290 4050637 Gurgaon 3240134 /4202835 / 93135-95193 / 9313940390 Panipat 4006498 / 9315430718 Hisar 9896111603 Hisar 9896111603

Bhiwani 9812244146 Fatehabad 220668 / 9812114637 Sonipat 9815900579 Kurukshetra 652172 / 92541017528 Jind 9812175001

Delhi: South Delhi 32449736/ 2694 48 - 26 / 34 / 43 / 24 / 42 / 8822 / 3843 / 46028228 / 9350852821 / 9350852822 / 9313572659/9350414121 East Delhi 65656240 / 41 / 9350595643/ 9350595658 / 9810841314 West Delhi 65656239 / 9313363012 / 9350852813 North Delhi 2745 5617 / 2663 / 9350593596 / 9350852822

Uttar Pradesh Lucknow 3252284/ 3225340/232 3306/ 232 3044/ 2335764/ 9336848973/ 336848974 Kanpur 3265005/ 3264550/2540581/9935769322 Faizabad 320808/ 241314 9415061089/ 9335029940/ Nirala 2786530 /4066249 / 9839173503 Kanpur / 9336337575 /9919237575 / 9415062345/ 9336866999 Kanpur 9415062345/ 9336866999 Lucknow 9335030333/ 9305461689 Jhansi 9415502608, 9936674704 Raibareilly 9335671666/9415082635 Varanasi 3298538/ 2224560 / 2227704 09336847755 Gorakhpur 3293222/2346126/9335029936 Allahabad 3296888/ 2260768/ 9336847754 Allahabad 2427080/ 9450542506 Mahmoorganj 2225135/9935758360 Ghaziabad 3263207/3223868/4104981/9313171608 Bareilly 3256600/ 2302688/

9837554885 Meerut 3254424/ 2640296 /9385312016 / 9319604400/ 9319604400/ 9319604400/9319604400 Noida 3229094/ 3228483/ 4267157/ 9313171607 Saharanpur 9760363770 MuzafferNagar 897363001/ 9897363001 BulandShahar 9358713434/ 9358713434 Bijnor 9335348707/ 9335348707 Bareilly Moradabad 9319963000/ 9319963000 Agra 3256033 / 3202045/2523067/ 9336847763 Agra 205995/ 9336847761

Etah 309527/9358085588 Mathura 3298208/9319338400 Kasaganj 9319878333/ 9219986444

Uttaranchal: Dehradun 3250544/ 2650916/ 9336618068 Haldawani 326300/ 282462/ 9336847756

Chattisgarh: Raipur 3240900/ 4074325/ 9329570731/ 4074326/ 3203435/ 4069176 Korba 320090/245857/9301321361 Bhilai 3940900/ 4050700 / 9301321362 Rajnandgaon 9329551000

West Bengal: Kolkata South - New Alipore 32426424/ 24007951/ 24007952 / 24007953/ 24009999/8322/09330913133/09830537820/09433460983/09836038804

Kolkata North – Saltlake 2426425/6431/22896221/22896192/22896193/ 9339733104/ 9433522575/ 9339310761 Asansol 2280978/9433522574 Siliguri

2525722/ 2525721/ 9434130296/ 9338078401/ 9434178876 Barrackpore (24PG North) 9332066199 Garia (24 PG South)/ 24367528/ 9339772596 Murshidabad 274691/ 9232473594/ 9333194352/ 9434743675 Nadia 9332656601 Burdwan 2542387/ 9332100554/ 9332233901 Durgapore 3290954/ 3208585/ 9332800271

Assam: Guwahati 2413138 / 2413158/09435044420/9954890168 /9864116390 Jorhat 2309008/ 9435091567 Guwahati 09864408750/ Tinsukia 2337512/ 09864052167

Orissa: Bhubaneshwar 0674-3299315/2530449/ 2573439/09338167410 / 9338167416/ 9338167411 Rourkela 3295442/2507092/ 9337467417 Cuttack 3254442/ 2331122/ 9337167412 Sambalpur 3295442/ 2404871/ 9338967419 Behrampur / 3295442/ 2221574/ 9338967414 Balasore 329442 / 241348/9338367415

Bihar: Patna 3252513 / 3259715 / 16/2261 071/09334461210 / 9234611210/ Muzaffarpur 2247221/ 9334061211 Gaya 2432863/9334140303 Bhagalpur 2409473/ 9431383711 Arrah 2409473/ 9304386630

Jharkhand: Ranchi 3299585/2341049/9334465110 Jamshedpur 3205008/2432464/ 9334173951/ 9334133359 Hazaribagh 9431366644 Dhanabd 9234411586

Note: For updated service center list please call customer care 022-39889000[9a.m. to 9a.m.]or visit our website www.onida.com

ONIDA

Customer's Warranty Card

Details

Customer's Name: _____

Address: _____

Dealer's Name: _____

Dealer Address & Stamp:

Model: _____

Date of Purchase: _____

Date of Expiry of Warranty: _____

Please paste the IMEI sticker in the space provided below, the Warranty of your handset is based on the same, so keep the form in a safe place

MIRC ELECTRONICS LTD provides this Limited Warranty to person who has purchased the ONIDA mobile phone and original accessory delivered with your mobile phone.

1. The warranty period for the transceiver for 1 year, battery & charger for 6 months is from the date of purchase of the product.

2.The warranty does not cover external housing and cosmetic parts.

3.MIRC ELECTRONICS LTD warrants to you that during the warranty period MIRC ELECTRONICS LTD or a MIRC ELECTRONICS LTD authorized service network will repair or replace, at MIRC ELECTRONICS LTD option, any defective product, or parts thereof, with new or factory rebuilt replacement items, and return the product to the consumer in working condition. No charge will be made to the consumer for either parts or labour in repairing or replacing the product. All replaced boards or equipment shall become property of MIRC ELECTRONICS LTD.

4.The warranty in respect of a repaired or replaced product/part shall extend for the remaining warranty period of the repaired product or replacement thereof to the consumer

5.Upon request from MIRC ELECTRONICS LTD or its authorized service center, the consumer must provide the purchase receipt or other documentation or information in respect of the date and place of purchase.

6.The consumer shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable.

●The Product has been subject to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive moisture or dampness, exposure to excessive temperatures, unauthorized modifications, unauthorized repair including but not limited to use of unauthorized spare parts in repairs abuse, accident, Acts of God, spills of food or liquids, maladjustment of customer control and breakage or damage to antenna.

●MIRC ELECTRNICS LTD has not been notified by the consumer of the defect in the product during the applicable warranty period.

●The product serial number or the accessory date code has been removed, defaced or altered.

●The defect or damage caused by defective function of the cellular system or by inadequate signal reception by the external antenna.

●The product has been used with or connected to an accessory not supplied by MIRC ELECTRONIC LTD , not fit for use with ONIDA mobile phones or used in other than its intended use.

●The seals of the product's battery enclosure have been broken or show evidence of tampering or the product's battery has been used in equipment other that for which is has been specified.

7.In order to derive the benefits of this warranty, the consumer should follow the following procedure.

●The consumer shall return the product to place of purchase for repair or replacement.

●The consumer may contact local MIRC ELECTRONICS LTD office for the nearest authorized service center.

●The consumer shall arrange for the product to be delivered to the authorized service center.

●The consumer will be billed for any parts or labour chargers not covered by this warranty. The consumer shall be responsible for expenses related to reinstallation of the product.